
Storage Tank Section

South Dakota Department of Environment and Natural Resources



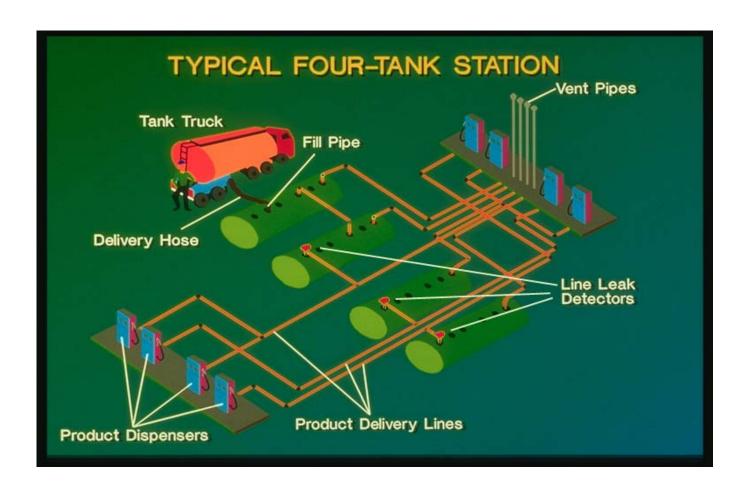

A Guide to Underground Storage Tank System

This handbook provides a general guidance on the storage tank system.

For specific requirements look at the underground storage tank system rules (Chapter 74:56:01, South Dakota Administrative Rules) which are located at the storage tank program web site

(http://www.state.sd.us/denr/DES/Ground/tanks/TankSection.htm).

TABLE OF CONTENTS

A.	Underground Storage System	.3				
В.	Plans and Specifications for New Underground Storage Tanks	.4				
C.	Leak Detection System					
D.	Internal Leak Detection System on Tanks	. 7				
E.	External Leak Detection on Tanks	10				
F.	Different Types of Tanks	.16				
G.	Leak Detection System on Product Lines	18				
H.	Submersible Pump and Line leak Detectors					
l.	Spill and Over Protection	21				
	1- What Are The Basics Of Spill Protection?2- What Are The Basics Of Overfill Protections?3- Spill And Overfill Check List	23				
J.	Corrosion Protection	25				
	 Cathodic Protection Using Sacrificial Anode Systems Cathodic Protection Using Impressed Current Systems Corrosion Protection Choices Corrosion Protection Checklist 	.25 .25				
K.	Tank Notification Forms	28				

A. Underground Storage System


An underground storage tank system is any tank or combination of tanks, including
the underground pipes connected to it, that is used to contain an accumulation of
regulated substances, the volume of which, including the volume of the connected
underground pipes, is 10 percent or more beneath the surface of the ground.

The two most important exemptions are:

- 1- A farm or residential tank of 1,100 gallons or less used for storing motor fuel for non-commercial purposes.
- 2- A tank used for storing heating oil for consumptive use on the premises where stored.
- Owners or operators of a new UST system must submit UST installation plans and specifications at least 30 days before installation to the department and any designated local notification agency for review and approval. Installation of the new UST system may not begin without prior approval of the department.
- Within 30 days after installing a new UST or upgrading an existing UST system in accordance with approved plans and specifications, owners or operators must notify the department on a notification form provided by the department.
- All new underground storage tank systems must have leak detection, spill
 containment, overfill protection, and must be protected from corrosion when they are
 installed.
- All new tanks installed within 1,000 feet of an existing community water system or any potable drinking water well must have secondary containment and monitored for leaks.
- All new piping installed within 1,000 feet of an existing community water system or any potable drinking water well must have secondary containment and monitored for leaks and must include under dispenser sumps.
- If over 25 feet of existing piping, located within 1,000 feet of an existing community water system or potable drinking water well is replaced after August 1, 2008, then the entire pipe run must have secondary containment and must include under dispenser sumps. Replaced systems must be designed, constructed and installed to allow for proper leak detection.

B. Plans and Specifications for New Underground Storage Tanks

To ensure new tank systems are installed according to state regulations and meet Department of Environment and Natural Resources (DENR) requirements, plans and specifications must be submitted to the Ground Water Quality Program for review and approval at least 30 days before the tanks are installed. If the tank systems meet state standards as described in <u>ARSD Chapter 74:56:01:04</u> for underground storage tank systems the tank owner should receive an approval letter within 30 days. If insufficient information is submitted DENR will be contacting you.

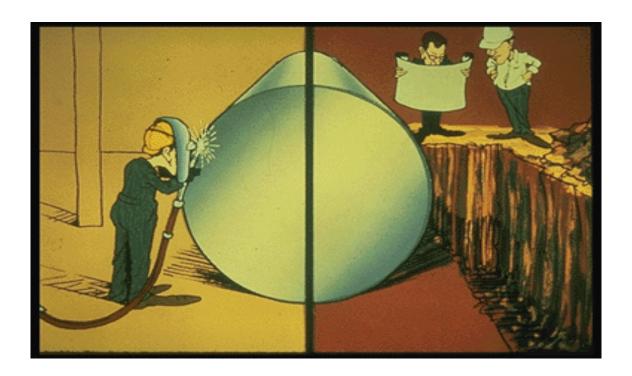

At a minimum, the plans and specifications for Underground Storage Tank Systems must include the type of tank and product line corrosion protection, overfill protection and spill containment specifications, and the method of leak detection for the system. The plans must include all information relevant to show the tank system is in compliance with state rules and must include a site map. Most tank installers will send these plans to DENR for you. You should be aware that other state, federal, and local agencies, including state and local fire prevention authorities, may also need to review the plans. DENR will do periodic inspections of installations. If the work is not being done in accordance with the approved plans and specifications, the work may be halted or required to be redone.


C. LEAK DETECTION SYSTEM

What Is Release Detection?

You must be able to determine at least every 30 days whether or not your tank and piping are leaking by using proper release detection methods.

Your release detection method must be able to detect a release from any portion of the tank and connected underground piping that routinely contains product.

Release detection must be installed, calibrated, operated, and maintained according to the manufacturer's instructions.

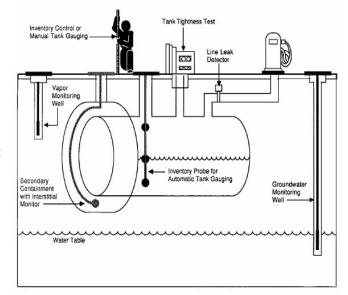

Do You Know If Your Release Detection Is Certified To Work At Your UST Site?

Release detection must meet specific performance requirements. You should have documentation from the manufacturer, vendor, or installer of your release detection equipment showing certification that it can meet performance requirements.

Some vendors or manufacturers supply their own certification, but more often an impartial "third party" is paid to test the release detection equipment and certify that performance requirements are met. An independent workgroup of release detection experts periodically evaluates all third-party certifications, thus providing a free and reliable list of evaluations of third-party certifications for various release detection equipment. Frequently updated, this list is available on the Internet at http://www.nwglde.org/ (the publication's title is List Of Leak Detection Evaluations For Underground Storage Tank Systems). If you can't find the certification anywhere, contact DENR at (605) 773-3296.

By checking the certification, you may discover the method you use has not been approved for use with the type of tank or piping you have or the type of product being stored. For example, you may learn from the certification that your method won't work with manifolded tanks, certain products, high throughput, or with certain tank sizes.

That's why you need to make sure your release detection method has clear certification that it will work effectively at your site with its specific characteristics.

How Can You Make Sure Your Leak Detection Method Is Working At Your UST Site?

If you don't properly understand your Underground Storage Tank (UST) System and your operation and maintenance (O&M) responsibilities, you may allow your UST site to become contaminated — then you will face cleanup costs and associated problems.

To avoid these problems use the checklists on the following pages that describe each type of leak detection method, discuss actions necessary for proper operation and maintenance (O&M), and note the records you should keep.

Locate the methods of release detection you are using at your facility, review these pages, and periodically complete the checklist. You might want to copy a page first and periodically fill out copies later.

If you have questions about your release detection system, review your owner's manual or call the vendor of your system. You may also call DENR at (605) 773-3296.

If you ever suspect or confirm a leak call DENR at (605) 773-3296. **Never ignore leak** detection alarms or failed leak detection tests. Treat them as potential leaks!

D. INTERNAL LEAK DETECTION SYSTEM ON TANKS

1- Automatic Tank Gauging

Autom	atic Tank Gauging (ATG) Systems (for tanks only)					
Description Of Release Detection	An automatic tank gauging (ATG) system consists of a probe permanently installed in a tank and wired to a monitor to provide information on product level and temperature. ATG systems automatically calculate the changes in product volume that can indicate a leaking tank.					
Certification For Your Release Detection Method	☐ Make sure your ATG system is certified for the types of tanks and stored contents on which the ATG system is used. Most manufacturers have their leak detection devices tested and certified by a third party to verify that their equipment meets specific performance requirements set by DENR. If you don't have certified performance claims, have the manufacturer provide them to you.					
	Use your ATG system to test for leaks at least every 30 days. Most systems are already programmed by the installer to run a leak test periodically. If your system is not programmed to automatically conduct the leak test, refer to your ATG system manual to identify which buttons to push to conduct the leak test. Testing more often than monthly can catch leaks sooner and reduce cleanup costs and problems.					
Perform	Make sure that the amount of product in your tank is sufficient to run the ATG leak test. The tank must contain a minimum amount of product to perform a valid leak detection test. One source for determining that minimum amount is the certification for your leak detection equipment (as discussed earlier).					
These O&M Actions	□ Frequently test your ATG system according to the manufacturer's instructions to make sure it is working properly. Don't assume that your release detection system is working and never needs checking. Read your owner's manual, run the appropriate tests, and see if your ATG system is set up and working properly. Most ATG systems have a test or self-diagnosis mode that can easily and routinely run these checks.					
	□ Contact DENR at (605) 773-3296, if your ATG ever fails a test or indicates a release					
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.					
Keep These	□ Keep results of your ATG system tests for at least 1 year. Your monitoring equipment may provide print outs that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right.					
O&M Records	□ Keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year.					
11000100	Keep all performance claims supplied by the installer, vendor, or manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above.					

2- Secondary Containment With Interstitial Monitoring

Secondary Containment With Interstitial Monitoring (for tanks & piping)						
Description Of Release Detection	Secondary containment is a barrier between the portion of an UST system that contains product and the outside environment. Examples of secondary containment include an outer tank or piping wall, an excavation liner, and a bladder inside an UST. The area between the inner and outer barriers — called the interstitial space — is monitored manually or automatically for evidence of a leak.					
Certification For Your Release Detection Method	 Make sure your interstitial monitoring equipment and any probes are certified for the types of tanks, piping, and stored contents on which the release detection system is used. Most manufacturers have their leak detection devices tested and certified by a third party to verify that their equipment meets specific performance requirements set by DENR. If you don't have certified performance claims, have the manufacturer provide them to you. Use your release detection system to test for leaks at least every 30 days. 					
Perform These O&M Actions	Testing more often than monthly can catch leaks sooner and reduce cleanup costs and problems. Frequently test your release detection system according to the manufacturer's instructions to make sure it is working properly. Don't assume that your release detection system is working and never needs checking. Read your owner's manual, run the appropriate tests, and see if your system is set up and working properly. Some interstitial monitoring systems have a test or self-diagnosis mode that can easily and routinely run these checks. Contact DENR at (605) 773-3296, If your interstitial monitoring ever fails a test or indicates a release. Periodically have a qualified UST contractor, such as the vendor who installed your release detection system, service all the system components according to the manufacturer's service instructions. Tank probes and other components can wear out and must be checked periodically. Many vendors recommend or require this maintenance activity at least annually. Keep interstitial monitoring access ports clearly marked and secured. Check your interstitial monitoring system owner's manual often to answer questions and to make sure you know the system's O&M procedures. Call the system's vendor or manufacturer for a copy of the owner's manual if you don't have one. Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.					
Keep These O&M Records	 Keep results of your release detection system tests for at least 1 year. Your monitoring equipment may provide print outs that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right. Keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year. Keep all performance claims supplied by the installer, vendor, or manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above. 					

3- Statistical Inventory Reconciliation (SIR)

Statistica	I Inventory Reconciliation (SIR) (for tanks & piping)					
Description Of Release Detection	SIR is typically a method in which a trained professional uses sophisticated computer software to conduct a statistical analysis of inventory, delivery, and dispensing data. You must supply the professional with data every month. There are also computer programs that enable an owner/operator to perform SIR. In either case, the result of the analysis may be pass, inconclusive, or fail.					
Certification For Your Release Detection Method	Make sure your SIR vendor's methodology is certified for the types of tanks, piping, and product on which you use SIR. Most vendors have their leak detection methodology tested and certified by a third party to verify that their equipment meets specific performance requirements.					
	Supply daily inventory data to your SIR vendor (as required) at least every 30 days. The vendor will provide you with your leak detection results after the statistical analysis is completed. Otherwise, use your computer software at least every 30 days to test your tank for leaks.					
	□ Contact DENR at (605) 773-3296, if your UST system fails a leak test.					
Perform These O&M Actions	If you receive an inconclusive result, you must work with your SIR vendor to correct the problem and document the results of the investigation. An inconclusive result means that you have not performed leak detection for that month. If you cannot resolve the problem, treat the inconclusive result as a suspected release.					
	If you stick your tank to gather data for the SIR vendor or your software, make sure your stick can measure to one-eighth of an inch and can measure the level of product over the full range of the tank's height. You should check your measuring stick periodically to make sure you can read the markings and numbers and that the bottom of the stick is not worn.					
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.					
Keep	Keep results of your SIR tests for at least 1 year. Unless you are keeping records of the 30-day release detection results and maintaining those records for at least 1 year, you are not doing leak detection right.					
These O&M	□ Keep all vendor performance claims for at least 5 years. This includes the certification of the SIR method discussed above.					
Records	 If you use an ATG system, keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year. 					
	□ Keep the records of investigations conducted as a result of any monthly monitoring conclusion of inconclusive or fail for at least 1 year. This may include the results of a tightness test performed during the investigation or a reevaluation based on corrected delivery or dispenser data.					

E. EXTERNAL LEAK DETECTION SYSTEM ON TANKS

1. Vapor Monitoring

	Vapor Monitoring (for tanks & piping)					
Description Of Release Detection	Vapor monitoring measures product vapors in the soil at the UST site to check for a leak. A site assessment must determine the number and placement of monitoring wells that make sure a release is detected. NOTE: vapor monitors will not work well with substances that do not easily vaporize (such as diesel fuel).					
Certification For Your Release Detection Method	Make sure your vapor monitoring equipment is certified for the types of stored contents on which the release detection system is used. Most manufacturers have their leak detection devices tested and certified by a third party to verify that their equipment meets specific performance requirements.					
	□ Use your release detection system to test for leaks at least every 30 days. Testing more often than monthly can catch leaks sooner and reduce cleanup costs and problems. Be sure you check all of your vapor monitoring wells.					
	□ Contact DENR at (605) 773-3296, if your UST system fails a leak test.					
Perform	□ Frequently test your release detection system according to the manufacturer's instructions to make sure it is working properly. Don't assume that your release detection system is working and never needs checking. Some electronic vapor monitoring systems have a test or self-diagnosis mode. If you have components (such as monitoring equipment, probes or sensors) for your vapor monitoring system, read your manual and test your equipment to see if it is working properly.					
These O&M Actions	Periodically have a qualified UST contractor, such as the vendor who installed your release detection system, service all the system components according to the manufacturer's service instructions. Probes and other components can wear out and must be checked periodically. Many vendors recommend or require this maintenance activity at least annually.					
	□ Keep your vapor monitoring wells clearly marked and secured.					
	□ Check your vapor monitoring system owner's manual often to answer questions and to make sure you know the system's operation and maintenance procedures. Call the system's vendor or manufacturer for a copy of the owner's manual if you don't have one.					
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.					
Keep	 Keep results of your release detection system tests for at least 1 year. Your monitoring equipment may provide print outs that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right. 					
These O&M	□ Keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year.					
Records	□ Keep all performance claims supplied by the installer, vendor, or manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above.					

2- Groundwater Monitoring (for tanks & piping)

G	Froundwater Monitoring (for tanks & piping)					
Description Of Release Detection	Groundwater monitoring looks for the presence of liquid product floating on the groundwater at the UST site. A site assessment must determine the number and placement of monitoring wells that make sure a release is detected. NOTE: this method cannot be used at sites where groundwater is more than 20 feet below the surface.					
Certification For Your Release Detection Method	 Make sure any automated groundwater monitoring equipment is certified for the types of stored contents on which the release detection system is used. Most manufacturers have their leak detection devices tested and certified by a third party to verify that their equipment meets specific performance requirements set by DENR. If you don't have certified performance claims, have the manufacturer provide them to you. Use your release detection system to test for leaks at least every 30 days. 					
	Testing more often than monthly can catch leaks sooner and reduce cleanup costs and problems. Be sure you check all of your groundwater monitoring wells.					
	□ Contact DENR at (605) 773-3296, if your UST system fails a leak test.					
Perform	□ Frequently test your automated release detection system according to the manufacturer's instructions to make sure it is working properly. Don't assume that your release detection system is working and never needs checking. Some electronic groundwater monitoring systems have a test or self-diagnosis mode. If you have components (such as monitoring equipment, probes or sensors) for your groundwater monitoring system, read your manual and test your equipment to see if it is working properly.					
These O&M Actions	Periodically have a qualified UST contractor, such as the vendor who installed your release detection system, service all the system components according to the manufacturer's service instructions. Probes and other components can wear out and must be checked periodically. Many vendors recommend or require this maintenance activity at least annually.					
	□ Keep your groundwater monitoring wells clearly marked and secured.					
	Check your groundwater monitoring system owner's manual often to answer questions and to make sure you know the system's operation and maintenance procedures. Call the system's vendor or manufacturer for a copy of the owner's manual if you don't have one.					
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.					
Keep These O&M Records	 Keep results of your release detection system tests for at least 1 year. Your monitoring equipment may provide print outs that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right. Keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year. Keep all performance claims supplied by the installer, vendor, or 					
	manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above.					

3- Inventory Control And Tank Tightness Testing (for tanks only)

Inven	tory Control And Tank Tightness Testing (for tanks only)				
Description Of Release Detection	This temporary method combines monthly inventory control with periodic tank tightness testing. Inventory control involves taking measurements of tank contents and recording the amount of product pumped each operating day, measuring and recording tank deliveries, and reconciling all this data at least once a month. This combined method also includes tightness testing, a sophisticated test performed by trained professionals. NOTE: This combination method can only be used temporarily for up to 10 years after installing a new UST.				
Certification For Your Release Detection Method	Make sure your tank tightness testing method is certified for the types of tanks and stored contents on which the tightness test is used. Most tightness test methods are certified by a third party to verify that they meet specific performance requirements set by DENR. If you don't have certified performance claims, have the tightness tester provide them to you.				
	☐ Take inventory readings and record the numbers at least each day that product is added to or taken out of the tank. You may want to use the Daily Inventory Worksheet provided for you on the next page.				
	 Reconcile the fuel deliveries with delivery receipts by taking inventory readings before and after each delivery. Record these readings on a Daily Inventory Worksheet. 				
	□ Reconcile all your data at least every 30 days. Use a Monthly Inventory.				
Doutous	 Have a tank tightness test conducted at least every 5 years. This testing needs to be conducted by a professional trained in performing tank tightness testing. 				
Perform These O&M	 Contact DENR at (605) 773-3296, if your tank fails a tightness test or if fails two consecutive months of inventory control. 				
Actions	□ Ensure that your measuring stick can measure to the nearest one-eighth inch and can measure the level of product over the full range of the tank's height. You should check your measuring stick periodically to make sure that you can read the markings and numbers and that the bottom of the stick is not worn.				
	Measure the water in your tank to the nearest one-eighth inch at least once a month and record the results on the reconciliation sheet. You can use a paste that changes color when it comes into contact with water.				
	 Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems. 				
Keep These	□ Keep results of your release detection system tests for at least 1 year. Your monitoring equipment may provide print outs that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right.				
O&M	□ Keep the results of your most recent tightness test.				
Records	 Keep all certification and performance claims for tank tightness test performed at your UST site for at least 5 years. 				

Monthly Inventory Record

Month/Year :/		Tank Identification & Type Of Fuel:			
Date Of Water Check:	Level (Inches):	Facility Name:			

	Start Stick	_		Book	End Stick	Inventory	Daily Over (+) Or	
Date	Inventory (Gallons)	Gallons Delivered	Gallons Pumped	Inventory (Gallons)	(Inches)	' (Gallons)	Short (//) [End // Book]	Initials
1	(+)	(-)	(=)					
2	(+)	(-)	(=)					
3	(+)	(-)	(=)					
4	(+)	(-)	(=)					
5	(+)	(-)	(=)					
6	(+)	(-)	(=)					
7	(+)	(-)	(=)					
8	(+)	(-)	(=)					
9	(+)	(-)	(=)					
7	(+)	(-)	(=)					
8	(+)	(-)	(=)					
9	(+)	(-)	(=)					
10	(+)	(-)	(=)					
11	(+)	(-)	(=)					
12	(+)	(-)	(=)					
13	(+)	(-)	(=)					
14	(+)	(-)	(=)					
15	(+)	(-)	(=)					
16	(+)	(-)	(=)					
17	(+)	(-)	(=)					
18	(+)	(-)	(=)					
19	(+)	(-)	(=)					
20	(+)	(-)	(=)					
21	(+)	(-)	(=)					
22	(+)	(-)	(=)					
23	(+)	(-)	(=)					
24	(+)	(-)	(=)					
25	(+)	(-)	(=)					
26	(+)	(-)	(=)					
27	(+)	(-)	(=)					
28	(+)	(-)	(=)					
29	(+)	(-)	(=)					
30	(+)	(-)	(=)					
31	(+)	(-)	(=)					

Leak Check:				Compare these
numbers				
Drop the last two digits				
from the Total Gallons				
Pumped number and enter here:	+	130	=	
gallons				

Is the total gallons over or short **larger** than leak check result? **Yes No** (circle one) If your answer is Yes for 2 months in a row, **notify DENR** as soon as possible.

Keep This Piece Of Paper On File For At Least 1 Year

4- Manual Tank Gauging (for tanks 2,000 gallons or less only)

,	Manual Tank Gauging					
	(for tanks 2,000 gallons or less only)					
	Manual tank gauging involves taking your tank out of service for the testing period (at least 36 hours) each week, during which the contents of the tank are measured twice at the beginning and twice at the end of the test period. The measurements are then compared to weekly and monthly standards to determine if the tank is tight.					
Description Of Release	Only tanks of 1000 gallons or less nominal capacity may use this as the sole method of release detection.					
Detection	Tanks of 1001 to 2,000 gallons may use this temporary method with periodic tank tightness testing. <i>This combination method can only be used temporarily for up to ten years after installing a new tank.</i> After completion of ten years, you must use a monthly leak detection method.					
	Tanks of greater than 2,000 gallons nominal capacity may not use this method to meet the requirements of leak detection.					
Certification For Your Release Detection Method	Make sure your tank tightness testing is certified for the types of tanks and stored contents on which the tightness test is used. Most tightness test methods are certified by a third party to verify that they meet specific performance requirements set by DENR. If you don't have certified performance claims, have the tightness tester provide them to you.					
	Once a week, record two inventory readings at the beginning of the test, allow the tank to sit undisturbed for the time specified in the Manual Tank Gauging and record two inventory readings at the end of the test. You may want to use the Manual Tank Gauging Worksheet provided for you on the next page.					
	 Reconcile the numbers weekly and record them on a Manual Tank Gauging Record. 					
	□ Contact DENR at (605) 773-3296, if your tank fails the weekly standard.					
Perform	 At the end of 4 weeks, reconcile your records for the monthly standard and record the result on a Manual Tank Gauging Record. 					
These O&M	□ Contact DENR at (605) 773-3296, if your tank fails the monthly standard.					
Actions	Conduct a tank tightness test at least every 5 years. This testing needs to be conducted by a professional trained in performing tank tightness testing.					
	□ Contact DENR at (605) 773-3296, if your tank fails the tightness test.					
	□ Ensure that your measuring stick can measure to the nearest one-eighth inch and can measure the level of product over the full range of the tank's height. You should check your measuring stick periodically to make sure that you can read the markings and numbers and that the bottom of the stick is not worn.					
	 Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems. 					
Keep These	□ Keep your manual tank gauging records for at least 1 year. Unless you are recording actual release detection results at least weekly and every 30 days and maintaining records for at least 1 year, you are not doing leak detection right.					
O&M	□ Keep the results of your most recent tightness test.					
Records	 Keep all certification and performance claims for tank tightness test performed at your UST site for at least 5 years. 					

Manual Tank Gauging

Month/Year :/		Tank Identification & Type Of Fuel:			
Date Of Water Check:	Level (Inches):	Facility Name:			

YEAR:	LENGTH OF TEST	START		END		END		CHANGE IN VOLUME	PASS WEEKLY	CHANGE IN VOLUME	PASS MONTHLY
START DATE (MONTH/DAY)	(HOURS)	AVE INCH	GAL	AVE INC	GAL	(WEEKLY)	TEST	(MONTHLY AVERAGE)	TEST		
							Y N				
							Y N		Y N		
							Y N				
							Y N				
							Y N				
							Y N		Y N		
							Y N				
							Y N				
							Y N				
							Y N		Y N		
							Y N				
							Y N				
							Y N				
							Y N		ΥN		
							Y N				
							Y N				

Table of Test Standards for Manual Tank Gauging

Tank Size	Minimum Duration Of Test	Weekly Standard (1 test)	Monthly Standard (4-test average)	
up to 550 gallons	36 hours	10 gallons	5 gallons	
551-1,000 gallons (when tank diameter is 64")	44 hours	9 gallons	4 gallons	
551-1,000 gallons (when tank diameter is 48")	58 hours	12 gallons	6 gallons	
1,001-2,000 gallons (also requires periodic tank tightness testing)	36 hours	26 gallons	13 gallons	

F. Different Types of Tanks


Double Wall Fiberglass Tank	Double Wall Composite Tank
 Double Wall Fiberglass Tank Sump for Turbine Pump Spill Bucket Sump for Interstitial Monitoring Sump for Monitoring Well (if applicable) Sensor for Leak Detection Wire to Leak Detection Control Panel Fuel Line Sensor for Measuring Fuel 	 1- Primary Tank 2- Interstitial Structural Layer 3- Fiberglass Secondary Containment 4- Access for Sump 5- Lugs 6- Openings for Monitoring
Typical Tank with Components	

ACT-100 Tank Permatank Tank

ACT-100 composite tanks have their outer surface coated with 100 mils of fiberglass reinforced plastic.

Permatank frp-jacketed tanks have an inner steel tank and an outer tank of multi-layer fiberglass. The built-in interstitial space can be easily checked for leaks.



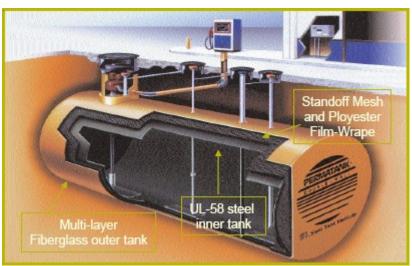

Sti-p3 Single Wall

Sti-p3 Double Walled

Sti-p3 means three methods of protection against external corrosion;

- Dielectric bushings.
- Corrosion resistant coatings.
- Sacrificial anodes.





G. LEAK DETECTION SYSTEM ON PRODUCT LINES

1- Automatic Line Leak Detection

Auto	matic Line Leak Detection (for pressurized piping only)
Description Of Release Detection	Automatic line leak detectors (LLDs) are designed to detect a catastrophic release from pressurized piping. Automatic LLDs must be designed to detect a leak at least as small as 3 gallons per hour at a line pressure of 10 psi within 1 hour. When a leak is detected, automatic LLDs must shut off the product flow, restrict the product flow, or trigger an audible or visual alarm. NOTE: Mechanical automatic LLDs need to be installed and operated as close as possible to the tank (LLDs are designed to detect a leak, restrict flow, etc. only between the detector and the dispenser).
Certification For Your Release Detection Method	Make sure your release detection equipment is certified for the types of piping and stored contents on which the release detection system is used. Most manufacturers have their leak detection devices tested and certified by a third party to verify that their equipment meets specific performance requirements set by DENR. If you don't have certified performance claims, have the manufacturer provide them to you.
	☐ Frequently test your automatic LLDs according to the manufacturer's instructions to make sure it is working properly. Don't assume that your release detection system is working and never needs checking. Some monitoring systems have a test or self-diagnosis mode.
Perform These O&M Actions	 Periodically have a qualified UST contractor, such as the vendor who installed your release detection system, service all the system components according to the manufacturers' service instructions. Components can wear out and must be checked periodically. Many vendors recommend or require this maintenance activity at least annually.
	□ Contact DENR at (605) 773-3296, if your LLD detects a leak.
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.
	□ For at least a year, keep the annual test that demonstrates that the LLD is functioning properly.
Keep These O&M	☐ If used for monthly monitoring, keep results of your release detection system tests for at least 1 year. Your monitoring equipment system may provide printouts that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right.
Records	 Keep all records of calibration, maintenance, and repair of your release detection equipment for at least 1 year.
	Keep all performance claims supplied by the installer, vendor, or manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above.

2- Line Tightness Testing

	Line Tightness Testing (for piping only)
Description Of Release Detection	This method uses a periodic line tightness test to determine if your piping is leaking. Tightness testing can be performed by either a trained professional or by using a permanently installed electronic system (sometimes connected to an automatic tank gauging system).
Certification For Your Release Detection Method	Make sure your line tightness testing or permanently installed electronic system is certified for the types of piping and stored contents on which the release detection system is used. Most tightness test methods and release detection equipment have been tested and certified by a third party to verify that the equipment or services meet specific performance requirements set by DENR. If you don't have certified performance claims, have the tightness tester or equipment manufacturer provide them to you.
	 If line tightness testing is used for pressurized piping, the test must be conducted at least annually.
	 If line tightness testing is used for suction piping (with check valve), the test must be conducted at least every three years. Safe suction piping (no check valve) does not need tightness testing.
Perform	☐ This tightness testing must be conducted by a professional trained in performing line tightness testing or by using a permanently installed electronic system.
These O&M	 Contact DENR at (605) 773-3296, if your piping fails the tightness test or if the electronic system indicates a leak.
Actions	 Periodically have a qualified UST contractor, such as the vendor who installed your release detection system, service all the system components according to the manufacturers' service instructions. Components can wear out and must be checked periodically. Many vendors recommend or require this maintenance activity at least annually.
	Make sure employees who run, monitor, or maintain the release detection system know exactly what they have to do and to whom to report problems.
Keep	□ Keep results of your release detection system tests for at least 1 year. Your monitoring equipment may provide printouts that can be used as records. Unless you are recording actual release detection results at least every 30 days and maintaining records for at least 1 year, you are not doing leak detection right.
These O&M Records	 If you use a permanently installed electronic system, keep all records of calibration, maintenance, and repair of your equipment for at least 1 year.
	Keep all performance claims supplied by the installer, vendor, or manufacturer for at least 5 years. These records include the certification of your leak detection equipment described above.

H. Submersible Pump and Line leak Detectors




I. SPILL AND OVERFILL PROTECTION

The purpose of spill and overfill protection equipment is to eliminate the potential for a release during fuel deliveries. The equipment must be in working order and used properly to provide adequate protection from spills and overfills.

Even the best spill and overfill protection equipment can become faulty over time if not properly operated and maintained.

Only one gallon of fuel leaking each week from a poorly maintained spill bucket can result in up to 195 tons of contaminated soil in a year.

Improper maintenance of the spill bucket at the UST site pictured below contributed to significant contamination of soil and groundwater.

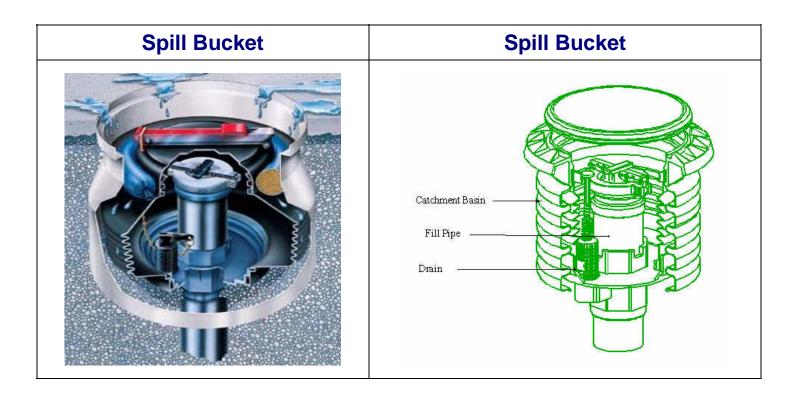

1. What Are The Basics Of Spill Protection?

Your USTs must have catchment basins — also called spill buckets — installed at the fill pipe to contain spills that may occur as a result of fuel deliveries.

- The spill bucket is designed to temporarily contain product spills that might occur during fuel delivery. To contain a spill, the spill bucket must be liquid tight.
- The spill bucket is not designed to contain fuel for long periods of time. After each delivery, empty and dispose of contents properly.
- Spill buckets need to be large enough to contain any fuel that may spill when the
 delivery hose is uncoupled from the fill pipe. Spill buckets typically range in size from
 5 gallons to 25 gallons.
- How Do You Maintain Your Spill Bucket?

The checklist below provides information on properly maintaining your spill bucket.

Spill Bucket Checklist

Spill Bucket Checklist

□ Keep your spill bucket empty of liquids.

or needs repair or replacement.

- Some spill buckets are equipped with a valve that allows you to drain accumulated fuel into your UST. Others may be equipped with a manual pump so fuel can be put into your UST by pumping it through the fill pipe. However, keep in mind that when you pump out or drain your spill bucket into your UST, any water and debris may also enter the UST. If a basin is not equipped with drain valve or pump, then any accumulated fuel or water must be removed manually and disposed of properly.
- □ Periodically check your spill bucket to remove any debris.

 Debris could include soil, stones, or trash.
- Periodically check to see if your spill bucket is still liquid tight.
 Have a qualified UST contractor inspect your spill bucket for signs of wear, cracks, or holes.
 Based on this inspection, the contractor may suggest a test to determine if the spill bucket is tight

2- What Are The Basics Of Overfill Protection?

Your USTs must have overfill protection installed to help prevent the overfilling of tanks.


Three types of overfill protection devices are commonly used:

- a Automatic shutoff devices
- b Overfill alarms
- c Ball float valves

Each of these forms of overfill protection is discussed in detail on the following pages.

 How Can You Help The Delivery Person Avoid Overfills?
 To protect your business, you must make every effort to help the delivery person avoid overfilling your UST.

Use A Checklist On Correct Filling Practices

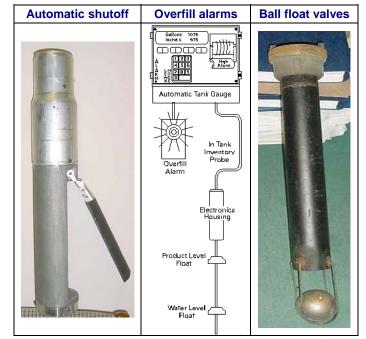

If correct filling practices are used, you will not exceed the UST's capacity. Overfills are caused when the delivery person makes a mistake, such as ignoring an overfill alarm.

Use Signs, Alert Your Delivery Person

The delivery person should know what type of overfill device is present on each tank at your facility and what action will occur if the overfill device is triggered — such as a visual and/or audible alarm or that the product flow into the tank will stop or slow significantly.

Educate and alert your delivery person by placing a clear sign near your fill pipes, in plain view of the delivery person.

3- Spill And Overfill Checklist

	Spill And Overfill Checklist	
Spill Bucket	Keep your spill bucket empty of liquids. Some spill buckets are equipped with a drainage valve which allows you to drain accumulated fuel into your UST. Others can be equipped with a manual pump so fuel can be put into your UST by pumping it through the fill pipe. However, keep in mind that when you pump out or drain your spill bucket into your UST, any water and debris may also enter the UST. If a spill bucket is not equipped with a drain valve or pump, then any accumulated fuel or water must be removed manually and disposed of properly.	
	Periodically check to see if your spill bucket is still liquid tight. Have a qualified UST contractor inspect your spill bucket for signs of wear, cracks, or holes. Based on this inspection, the contractor may suggest a test to determine if the spill bucket is tight or needs repair or replacement.	
Automatic	A qualified UST contractor periodically checks to make sure that the automatic shutoff device is functioning properly and that the device will shut off fuel flowing into the tank at 95% of the tank capacity or before the fittings at the top of the tank are exposed to fuel:	
Shutoff	Make sure the float operates properly.	
Devices	 Make sure that there are no obstructions in the fill pipe that would keep the floatin mechanism from working. 	g
	You have posted signs that the delivery person can easily see and that alert the delivery person to the overfill warning devices and alarms in use at your facility.	
	A qualified UST contractor periodically checks your electronic overfill alarm to make sure that it is functioning properly and that the alarm activates when the fuel reaches 90% of the tank capacity or is within one minute of being overfilled:	
Overfill Alarms	• Ensure that the alarm can be heard and/or seen from where the tank is fueled.	
Aldillis	Make sure that the electronic device and probe are operating properly.	
	You have posted signs that the delivery person can easily see and that alert the delivery person to the overfill warning devices and alarms in use at your facility.	
	A qualified UST contractor periodically checks to make sure that the ball float valve is functioning properly and that it will restrict fuel flowing into the tank at 90% of the tank capacity or 30 minutes prior to overfilling:	
	Ensure that the air hole is not plugged.	
Ball Float	Make sure the ball cage is still intact.	
Valves	Ensure the ball still moves freely in the cage.	
	Make sure the ball still seals tightly on the pipe.	
	You have posted signs that the delivery person can easily see and that alert the delivery person to the overfill warning devices and alarms in use at your facility.	

J. CORROSION PROTECTION

To prevent leaks, all parts of your UST system that are underground and routinely contain product need to be protected from corrosion. The UST system includes the tank, piping, and ancillary equipment, such as flexible connectors, fittings, and pumps. Unprotected metal UST components can deteriorate and leak when underground electrical currents act upon them.

One way to protect UST components from corrosion is to **make them with nonmetallic**,



noncorrodible materials, such as USTs made of (or clad or jacketed with) fiberglass reinforced plastic (FRP) or other noncorrodible materials —. Noncorrodible USTs like these do not require O&M for corrosion protection.

UST components made from metal, however, that routinely contain product and are in direct contact with the ground need corrosion protection provided by cathodic protection or (in some cases) lining the interior of the tank, as described below. These options require O&M.

Note: Metal tanks or piping installed after December 22, 1988 must have a dielectric coating (a coating that does not conduct electricity) in addition to the cathodic protection described below.

1- Cathodic Protection Using Sacrificial Anode Systems

Sacrificial anodes are buried and attached to UST components for corrosion protection — as illustrated on the right by an anode attached to a tank. Anodes are pieces of metal that are more electrically active than steel, and thus they suffer the destructive effects of corrosion rather than the steel they are attached to.

2- Cathodic Protection Using Impressed Current Systems

An impressed current system — as shown on the right — uses a rectifier to provide direct

Steel Cathodic Area Anodes (-)

Soil Electrolyte Cathodic Protection Employing Impressed Current

current through anodes to the tank or piping to achieve corrosion protection. The steel is protected because the current going to the steel overcomes the corrosion-causing current flowing away from it. The cathodic protection rectifier must always be on and operating to protect your UST system from corrosion.



3. Corrosion Protection Choices

Corrosion Protection Using Internal Lining Of The Tank

This corrosion protection option applies only to tanks installed before December 22, 1988. These older tanks can be internally lined by trained professionals to meet the corrosion protection requirements — as shown on the right, in which a professional follows industry codes to safely and effectively line a tank's interior.

It may help you to see your corrosion protection options displayed in the following table.

Corrosion Protection Choices					
Option	Description				
Noncorrodible Material	The tank or piping is constructed of noncorrodible material.				
Steel Tank Clad Or Jacketed With A Noncorrodible Material	Examples of cladding or jacket material include fiberglass and urethane. Does not apply to piping.				
Coated And Cathodically Protected Steel Tanks Or Piping	Steel tank and piping is well-coated with a dielectric material and cathodically protected.				
Cathodically Protected Noncoated Steel Tanks Or Piping	This option is only for steel tanks and piping installed before December 22, 1988. Cathodic protection is usually provided by an impressed current system.				
Internal Lining Of Tanks	This option is only for steel tanks installed before December 22, 1988. A lining is applied to the inside of the tank. Does not apply to piping.				
Combination Of Cathodically Protected Steel And Internal Lining Of Tanks	This option is only for steel tanks installed before December 22, 1988. Cathodic protection is usually provided by an impressed current system. Does not apply to piping.				
Other Methods Used To Achieve Corrosion Protection	If you have tanks or piping that do not meet any of the descriptions above, check with DENR to see if your UST system meets the requirements for corrosion protection.				

Note: In addition to tanks and piping, all other metal components in direct contact with the ground that routinely hold product — such as flexible connectors, swing joints, fittings, and pumps — must also be cathodically protected.

4. Corrosion Protection Checklist

	Corrosion Protection Checklist				
	You need to have a periodic test conducted by a qualified corrosion tester to make sure your cathodic protection system is adequately protecting your UST system. This test needs to be conducted:				
	□ Within 6 months of installation.				
Sacrificial	□ At least every 3 years after the previous test.				
Anode Cathodic	□ Within 6 months after any repairs to your UST system.				
Protection Systems	 Make sure the professional tester is qualified to perform the test and follows a standard code of practice to determine that test criteria are adequate. 				
- Cyclemic	 If any test indicates your tanks are not adequately protected, you need to have a corrosion expert examine and fix your system. 				
	 Testing more frequently can catch problems before they become big problems. 				
	□ You need to keep the results of at least the last two tests on file.				
	You need to have a periodic test conducted by a qualified corrosion tester to make sure your cathodic protection system is adequately protecting your UST system. This test needs to be conducted:				
	□ Within 6 months of installation.				
	□ At least every 3 years after the previous test.				
	□ Within 6 months after any repairs to your UST system.				
	 Make sure the professional tester is qualified to perform the test and follows a standard code of practice to determine that test criteria are adequate. 				
Impressed	 If any test indicates your tanks are not adequately protected, you need to have a corrosion expert examine and fix your system. 				
Current	 Testing more frequently can catch problems before they become big problems. 				
Cathodic Protection Systems	You need to keep the results of at least the last two tests on file. See next page for a cathodic protection test record keeping form.				
Systems	 You need to inspect your rectifier at least every 60 days to make sure that it is operating within normal limits. 				
	 This inspection involves reading and recording the voltage and amperage readouts on the rectifier. You or your employees can perform this periodic inspection. 				
	 Make sure your cathodic protection professional provides you with the rectifier's acceptable operating levels so you can compare the readings you take with an acceptable operating level. If your readings are not within acceptable levels, you must contact a cathodic protection professional to address the problem. 				
	□ You need to keep records of at least the last 3 rectifier readings.				
	Never turn off your rectifier!				
Internally Lined	□ Within 10 years after lining and at least every 5 years thereafter, the lined tank must be inspected by a trained professional and found to be structurally sound with the lining still performing according to original design specifications. Make sure the professional performing the inspection follows a standard code of practice.				
Tanks	□ Keep records of the inspection.				

K. Tank Notification Forms



-										
	1	Notificatio	n for Under	gro	ound Storage Tanks					
Ground Water	er Quality Program, Stora	age Tank Secti	on		STATE	USE	ONLY			
	B East Capitol, Pierre, SE (605) 773-3296, Fax # (6			FACILITY ID NUMBER: DENR P&S NUMBER:						
	www.state.sd.us/DEN	IR								
TY	YPE OF NOTIFICA	TION		DA ⁻	TE RECEIVED:					
A. NEW	B. AMENDED		C. CLOSURE							
No. of tanks	B. AMENDED		C. CLOSUKE	А. В.	Date Entered into Compute Data Entry Clerk Initials					
at facility No. of continuation sheets attached				C.	Owner was contacted to clarify re	esponse	s, comments:	:		
INSTRUCTIONS									_	
Please type or print in ink all items. This form must be completed for each location containing underground storage tanks. If more than five (5) tanks are owned at this location, photocopy the following sheets, and staple continuation sheets to the form.									_	
		G	SENERAL IN	IFO	RMATION					
into use after that date, storage, use, or dispension of the case of any unde no longer in use on that discontinuation of its us What Tanks Are Included? combination of tanks that (1) substances," and (2) whose wore beneath the ground. So used oil or diesel fuel, and 2. What Tanks Are Excluded? notification. Other tanks excluded for noncommercial purpose.	ince January 1, 1974, that a use after May 8, 1986. The ne Resource Conservation of the Resource of the Resource of RCRA, as amended that store regulated substate existence of their tanks. Our ground storage tank in use any person who owns an using of regulated substance reground storage tank in use a date, any person who owns and the Resource of the	are in the ground information recand Recovery A cate and evaluat substances. It is available record experiences that, if a cate must not more than the cate of the	d as of May 8, juested is ct (RCRA), as e underground expected that is, or in the unless exempted, y designated 1984, or brought rage tank used for one or lated biping) is 10% or ig: 1. gasoline, or fumigants.	Se Lia ha: any (60 Wh Gre 52: Ph tak 198 not Pe sub		Jazardou y regulat, or lagocon system lines director of the store of t	is Liquid Pipelir ed under State ons; ons; ons; ons; ectly related to ea (such as a brage tank is situated to ea (such as a brage tank is situated to each and the substance ental Response of those substance ental Response	ne Safety A e laws; oil or gas pasement, uated upor 38-21, exc nd Solid W defined as a, Compen tances regioleum, e.g. perature an te).	production cellar, n or above the ept those hazardous in sation and ulated as ,, crude oil or nd pressure extended by May 8, , 1986, must tion shall be	
I. OWNERSHIP OF TAI					I. LOCATION OF TANK(S)					
Owner Name (Corporation, Individual, Public Agency, or Other Entity)				Exar	own, give the geographic location of tanks b mples Lat. 42, 36, 12 N Long. 85, 24, 17 W itude					
Street Address			Facility Name or Company Site Identifier, as applicable (if same as Section mark box here)							
				Stre	et Address			1		
City		State	Zip Code							
County				City			State	Zip Code		
Phone Number (include Area Code	e)			Cou	nty	Phone	Number (include	Area Code)	

Page 2 of 5 South Dakota Department of Environment and Natural Resources Pierre, SD 57501 Denk ID NUMBER (STATE USE ONLY)								
Notification for Underground Storage Tanks								
III. TYPE OF OWNER	1		IV. INDIAN LANDS					
Federal Government Con State Government Priv Local Government	Tanks are located on IndianReservation or Tanks are owned by ration, tribe, or individ	Tribe or Nation:						
		V. TYPE O	L					
Gas Station Petroleum Distributor Air Taxi (Airline) Aircraft /Airport Owner Auto Dealership/Repair Shop	Railroad Federal - Non-M Federal - Military Industrial Contractor	☐ Trucking/Transport ☐ Utilities ☐ Residential ☐ Farm ☐ Other (Explain)						
	VI. C	CONTACT PERSON	IN CHARGE OF TA	NKS				
Name:			Phone Num	nber (Include Area Code):				
		VII. FINANCIAL F	RESPONSIBILITY					
		have met the financial re in accordance with	esponsibility requirement 40 CFR Subpart H	ts				
Check All that Apply								
Self Insurance Commercial Insurance Risk Retention Group	Guarantee Surety Bond Letter of Credit	State Funds Trust Fund Other Method Allowed - Specify						
		VIII. CERT	IFICATION					
I certify under penalty of law that I have pe of those individuals immediately respons								
Name and official title of owner or owner's authorized representative (Print)								

Page	3	of	5

South Dakota

Department of Environment and Natural Resources
Pierre, SD 57501

DENR ID NUMBER (STATE USE ONLY)

Notification for Underground Storage Tanks

IX. DESCRIPTION OF UNDERGROUND STORAGE TANKS (Complete for each tank at this location.)								
Tar	nk Identification Number	Tank No.						
1.	Status of Tank (mark only one)							
	Currently In Use Temporarily Out of Use Permanently Out of Use							
2.	Date of Installation (mo./year)							
3.	Estimated Total Capacity (gallons)							
4.	Material of Construction (mark all that apply) Asphalt Coated or Bare Steel Manufactured Cathodically Protected Steel (sti-P ₃ Tank) Field Installed Impressed Current Epoxy Coated Steel Composite (Steel with Fiberglass) Fiberglass Reinforced Plastic Lined Interior Double Walled Polyethylene Tank Jacket Concrete Excavation Liner Unknown Other, Please specify							
	Has tank been repaired?							
5.	Piping (Material) (mark all that apply) Bare Steel Galvanized Steel Fiberglass Reinforced Plastic Copper Cathodically Protected Double Walled Secondary Containment Unknown Other, Please Specify							
6.	Piping (Type) (mark all that apply) Suction: no valve at tank Suction: valve at tank Pressure Gravity Feed Has piping been repaired?							

Page 4 of 5 South Dakota Department of Environment and Natural Resources Pierre, SD 57501 DENR ID NUMBER (STATE USE ONLY)												
Notification for Underground Storage Tanks												
Tank Identification Number	Tank No.	Tank No.	Tank No.	Tank No.	Tank No.							
Substance Currently or Last Stored in Greatest Quantity by Volume												
Gasoline Diesel Gasohol Kerosene Heating Oil Used Oil Aviation Fuel Jet Fuel E85 Other												
Hazardous Substance												
CERCLA name and/or CAS number												
Mixture of Substances Please Specify												
Υ ΤΔΝΙ	(S OUT OF USE (OR CHANGE IN S	FRVICE									
X. TANKS OUT OF USE, OR CHANGE IN SERVICE 1. Closing of Tank												
A. Estimated date last used (mo./day/year)												
B. Estimated date tank closed (mo./day/year)												
C. Tank was removed from ground D. Tank was closed in ground E. Tank filled with inert material Describe												
F. Change in service												
Site Assessment Completed (DENR Spill Number, if known)												
Evidence of a leak detected												

Page 5 of 5

South Dakota

Department of Environment and Natural Resources

Pierre, SD 57501

DENR ID NUMBER (STATE USE ONLY)

Notification for Underground Storage Tanks

XI. CERTIFICATION OF COMPLIANCE (COMPLETE FOR ALL NEW AND UPGRADED TANKS AT THIS LOCATION)												
Tank Identification Number		Tank No.		Tank No.		Tank No.		Tank No.		Tank No.		
1. A		Installation Installer certified by tank and piping manufacturers										
В	3.	Installer certified or licensed by DENR										
C		Installation inspected by a registered engineer										
D).	Installation inspected by DENR										
Е	. 1	Plan & Specification approved by DENR										
F		Manufacturer's installation checklists have been completed										
G	i .	Another method allowed by DENR. Please specify.										
		D (M		DIDING	TANK	PIPING	TANK	PIPING	TANK	PIPING	TANK	PIPING
2. R	Relea	ase Detection (Mark all that apply)	TANK	PIPING	IANK	PIPING	IANK	PIPING	IANK	PIPING	TANK	PIPING
A	٠.	Manual tank gauging										
В		Tank tightness testing										
C		Inventory Controls										
С		Automatic tank gauging										
Е		Vapor monitoring										
F		Groundwater monitoring										
		Interstitial monitoring/secondary containment										
F		Automatic line leak detectors										
I.		Line tightness testing										
J	•	Other method allowed by DENR.										
		Please specify										
3. Co	orro	sion Protection (if applicable) List Tank Potentials										
4. S	pill :	and Overfill Protection										
Α	١.	Overfill device installed										
		Please specify										
В	3.	Spill device installed										
OATH	: I c	ertify the information concerning installation that is pro	vided in s	ection XI is	s true to the	e best of m	y belief an	d knowled	ge.			
Installe	er:	Name	Name Date									
		Position Company										



Regulated Storage Tank Removal Notification Form STATE USE ONLY **GENERAL INFORMATION** If an UST system is taken out of service for longer than 12 months and if an AST system FACILITY ID NUMBER: taken out of service for longer than 24 months, it shall be permanently closed. State and DATE RECEIVED: Federal laws require notification at least 30 days before permanent closure. If more than five (5) tanks are owned at this location, photocopy this form, and staple the photocopy to the original form. Date Entered into Computer Where To Notify? Send completed forms to: Ground Water Quality Program, Storage Tank Section Data Entry Clerk Initials B. 523 East Capitol, Pierre, SD 57501 Date Faxed to PRCF Phone # (605) 773-3296, Fax # (605) 773-6035 www.state.sd.us/DENR I. OWNERSHIP OF TANK(S) II. LOCATION OF TANK(S) If known, give the geographic location of tanks by degrees, minutes, and seconds. Examples Lat. 42, 36, 12 N Long. 85, 24, 17 W Owner Name (Corporation, Individual, Public Agency, or Other Entity) Latitude Longitude _ (if same as Section I, mark box here) Street Address **Facility Name** Street Address City State Zip Code City Zip Code County Phone Number (include Area Code) Phone Number (include Area Code) County **Tank Identification Number** Tank No. 1 Tank No. 2 Tank No. 3 Tank No. 4 Tank No. 5 UST (underground) or AST (aboveground) Tank Capacity **Date Last Use** Type of Fuel Stored Will this tank system be replaced? If yes, Describe Have plans been approved by DENR Scheduled removal date Date performed Has pre-removal assessment been performed? Name of Environmental Consultant to be present during removal Note: Regulated tanks over 11,00 gallon capacity must have a Certified Petroleum Release Assessor (CPRA) or Remediator(CPRR) assist with soil assessment during removal. Name of State or Local Official to be Present Note: Tanks under 11,00 gallons capacity do not require a Certified PRA or PRR, however, DENR requires a state or local official to act as a third party to observe the collection of soil samples. Volume of tank bottoms Volume of Product Volume of Water (sludge) Disposal of tank, tank bottoms, and water Note: Wastes must be appropriately identified, determine if they exhibit hazardous characteristics and be disposed of properly. Tanks not recycled or salvaged must also be disposed of properly. Receipts or waste manifests may be required by the DENR Waste Management Program upon disposal. Please call (605) 773-3153 for questions regarding the waste disposal. Form completed by __



If you have any further questions, please contact the South Dakota Department of Environment and Natural Resources, Ground Water Quality Program, Storage Tank Section. Pierre (605) 773-3296, Rapid City (605) 394-2229 or Sioux Falls (605) 362-3500